


# GUN DEFENDER™

## INSTRUCTIONS

The Gun Defender™ comes pre-assembled from the factory. The soft inner lining needs to be adjusted for the specific rifle or shotgun you are carrying.

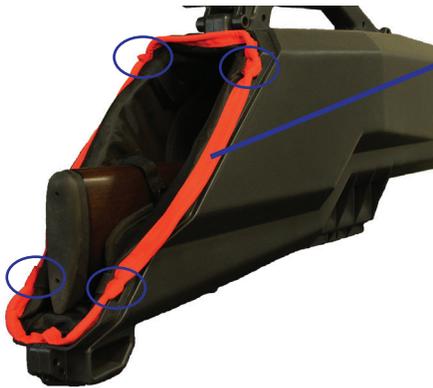

1. The soft inner lining is attached to the hard outer case via (4) velcro straps. Undo the straps. Remove the inner lining.

2. There are (4) velcro inserts inside of the soft case: (1) Trigger Guard Stop and (3) Barrel Pads. These inserts help hold the rifle in place and protect it. They will need to be adjusted to fit the rifle you intend to transport. ***The easiest way to adjust the inserts is to place your rifle in the lining and adjust the inserts accordingly.***



3. Adjust the Trigger Guard Stop. ***This insert is critical to holding the rifle in place in the lining.*** Peel back the top portion of the inner lining for easy access. The two ends of the insert will stick to the area pictured. Adjust the insert so that the trigger guard of your rifle is captured by it.

4. Adjust the Barrel Pads. ***These inserts will help the barrel from moving around in the case and will protect it.*** The (3) remaining barrel pad inserts will stick the left, right, and to the removable top portion of the lining. These inserts should be adjusted so they capture the barrel and protect it.

5. Replace the removeable top of the lining. Re-attach the (4) velcro straps that attach the lining to the hard outer case. ***Your rifle should slide in and out of the case easily and should stop sliding forward when the trigger guard hits the stop.*** Use the holster and clip to secure the butt of the gun. Close the lid and secure it with the provided pin.

